

Configuration LMA-



Connect config cable, install and start LMA / MW22 configuration software.



The **READ** button **7** is used to read out the data of the LMA-.

The measuring range of 0...100°C is fixed and cannot be changed.

Configuration settings that are made must be transferred to the LMA- using the **WRITE 7** button.

Configuration settings can be saved or read under file **4**.

The configuration can be printed out using the **PRINT** button **8**.